




ALT TAN GÖRÜNÜM

BOTTOM VIEW

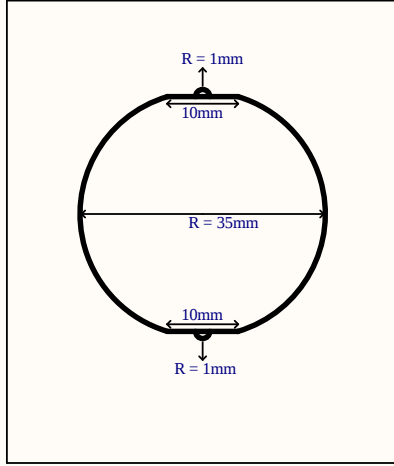

ÜST TEN GÖRÜNÜM

 TOP VIEW

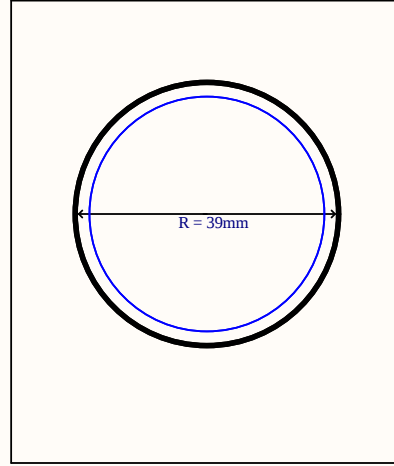

KUMANDA KARTI KAYIT UCU 1000 ile ÇALIŞIYORSA JUMPERİ (-) KONUMUNA ALINIZ.
IF THE CONTROL BOARD WORKS WITH CALL IN 1000, PUT THE JUMPER TO (-) POSITION.

KUMANDA KARTI KAYIT UCU 100 ile ÇALIŞIYORSA JUMPERİ (+) KONUMUNA ALINIZ.
IF THE CONTROL BOARD WORKS WITH CALL IN 100, PUT THE JUMPER TO (+) POSITION.

+24VDC GİRİŞİ +24VDC INPUT
KAYIT ÇIKIŞI CALL OUTPUT
0V GİRİŞİ 0VDC INPUT

125kHz RFID ANAHTARLIK



125kHz RFID TAG

ALT TAN GÖRÜNÜM



BOTTOM VIEW

ÜST TEN GÖRÜNÜM



TOP VIEW

MASTER KART TANITMA

MASTER KART TANITMAK İÇİN PRG BUTONUNA BASILI TUTARAK TANITMAK İSTEDİĞİNİZ KARTI OKUTUNUZ. SESLİ UYARI OLARAK ONAY SESİ (KISA SİNYAL) ALDIĞINIZDA MASTER KART TANITMA İŞLEMİ BAŞARILI OLMUŞTUR.

MASTER CARD INTRODUCTION

TO PROMOTE A MASTER CARD, PRESS THE PRG BUTTON AND READ THE CARD YOU WANT TO PROMOTE. WHEN YOU RECEIVE A CONFIRMATION SOUND (SHORT SIGNAL) AS A VOICE WARNING, THE MASTER CARD IDENTIFICATION PROCESS HAS BEEN SUCCESSFUL.

KART YETKİLENDİRME

BİR KEZ MASTER KART OKUTULUR VE ONAY SESİ ALINIR. ARDINDAN YETKİLENDİRMEK İSTENİLEN KARTLAR TANITILIR SIRA SIRA. HER İŞLEM SONUNDA ONAY SESİ ALINIRSA KART KAYDI BAŞARILI DEMEKTİR. 10 SANİYE İÇİNDE BİR İŞLEM YAPILMAZSA KAYIT MENÜSÜNDEN OTOMATİK OLARAK ÇIKAR. 10 SANİYE BEKLEMEYEN KAYDI TAMAMLAMAK İSTERSENİZ TEKRAR MASTER KART OKUTMANIZ GEREKİR.

CARD AUTHORIZATION

THE MASTER CARD IS SCAN ONCE AND A CONFIRMATION SOUND IS RECEIVED. THEN THE CARDS WHICH ARE REQUESTED TO AUTHORIZE ARE INTRODUCED IN ORDER. IF A CONFIRMATION SOUND IS RECEIVED AT THE END OF EACH TRANSACTION, IT MEANS CARD REGISTRATION IS SUCCESSFUL. IF NO ACTION IS TAKEN WITHIN 10 SECONDS, IT WILL AUTOMATICALLY EXIT THE REGISTRATION MENU. IF YOU WANT TO COMPLETE THE REGISTRATION WITHOUT WAITING FOR 10 SECONDS, YOU MUST SCAN THE MASTER CARD AGAIN.

KART SİLME

KAYIT SİLME İÇİN PRG BUTONUNA 10 KEZ BASMANIZ GEREKİR. HER BASMA İŞLEMİNDE ONAY SESİ GELİR. 10 KEZ OLDUKTAN SONRA KARTLARIN HEPSİ SİLİNİR. MASTER KART SİLİNMEZ.

DELETE CARD

TO DELETE THE RECORD, YOU MUST PRESS THE PRG BUTTON 10 TIMES. A CONFIRMATION SOUND IS MADE WITH EVERY PRESS. AFTER IT HAPPENS 10 TIMES, ALL CARDS WILL BE DELETED. THE MASTER CARD CANNOT BE DELETED.

MODEL : RF-B150

AÇIKLAMA : RF-B150 ÖLÇÜLER ve KULLANMA TALİMATI

TARİH : 10.02.2025

REVİZYON : REV.A1

TOPLAM SAYFA : 1

SAYFA : 1



www.protonx.com.tr

MODEL : RF-B150

DESCRIPTION : RF-B150 DIMENSIONS and USER INSTRUCTIONS

DATE : 10.02.2025

REVISION : REV.A1

TOTAL PAGES : 1

PAGE : 1

Bu belge uygulamalar için öneri niteliğindedir. Belge de yer alabilecek olası hatalar ve eksiklerden şirketimiz sorumlu tutulamaz. Şirketimiz önceden haber vermaksızın belgenin içeriği veya görüntüsünde değişiklik yapma hakkını saklı tutar. Belge yasal izin olmaksızın çoğaltılamaz ve üzerinde değişiklik yapılamaz.

This document is a recommendation for applications. Our company cannot be held responsible for possible errors and omissions that may appear in the document. Our company reserves the right to make changes to the content or appearance of the document without prior notice. The document cannot be reproduced or modified without legal permission.